

ELK M1 PANEL KEYPAD QUICKGUIDE



ELK-M1KP LCD Keypad



ELK-M1KP2 LCD Keypad

Arm System – All protected windows and doors must be closed. Ready light should be green.

- **Exit**— Press **EXIT** button.
Arms all devices including motion detectors.
- **Stay**— Press **STAY** button.
Arms all devices and automatically bypass all motion detectors.
- **Instant**— Press **STAY** button again after pressing **STAY** to arm system.
Arms entry doors without delay and bypass all motion detectors.

Silence an Alarm /Turn System Off: Enter user code to silence.

Reset System: After silencing, enter user code again to acknowledge/clear burglary alarm. **FIRE RESET:** Press ELK Button & enter a user code if prompted. Press up or down arrows until keypad displays “2-Reset Smoke Detectors”. Press Right Arrow key to select this menu. Screen will display “5 Seconds Smoke Output Reset”. After 2 beeps from keypad the reset is complete. Keypad will automatically revert to main display.

Door Chime On/Off: Press CHIME button to toggle through options in the following order: Chime/Voice/Chime & Voice/Off

Bypass A Zone: Press **BYPASS** button, zone number, **BYPASS** Button

Bypass all violated zones: **BYPASS** button, 999, **BYPASS** button.

Un-bypass all zones: **BYPASS** button, 0, **BYPASS** Button

Panic Buttons: F1=Fire, F2=Police, F3=EMS/Medical

Change or Add Additional Codes: Elk Button, Up arrow to #6 (Enter code if prompted), Right arrow, Up arrow to User number to change, Right arrow, enter code.

Sending a Test Signal: Press Elk Button, Up arrow to #8, (Enter code if prompted), Up arrow to system test, Right arrow, Up arrow to “communicator send test signal, Right arrow.